

# ELIIXA+ 16k/8k Mono Cmos Multi-Line Monochrome Camera

#### **DATASHEET**

#### **Features**

- Cmos Sensor 4x 16384 Pixels, 5 x 5μm
- Multi-Line structure (1, 2 or 4)
- Interface :
  - Full CameraLink® (4, 8 or 10 Channels), 85MHz each
  - CoaXPress® (4x Links)
- Line Rate :
  - Up to 50000 l/s In CameraLink®
  - Up to 100000 l/s in CoaXPress®
- Data Rate :
  - Up to 850 MB/s In CameraLink®
  - Up to 1,6GB/s in CoaXPress®
- Bit Depth: 8, 10 or 12bits
- Flat Field Correction
- Look Up Table
- New "Bhx" Models with New Sensor and HDR feature
- Low Power Consumption : <16W
- Compliant with Standard Lenses of the Market

# E Line DMOS technology 2V CL1 CL2 CV CVP1 CXP2 CXP3 CXP4 CXP4 CXP5 CXP4 CXP5 CXP4 CXP5 CXP5 CXP6 CXP7 CXP7

# **Description**

e2v's next generation of line scan cameras are setting new, high standards for line rate and image quality. Thanks to e2v's recently developed multi line CMOS technology, the camera provides an unmatched 100 000 lines/s in a 16k pixel format and combines high response with an extremely low noise level; this delivers high signal to noise ratio even when short integration times are required or when illumination is limited. The 5µm pixel size is arranged in four active lines, ensuring optimal spatial resolution in both scanning and sensor directions with off-the-shelf lenses. An outstanding data rate in excess of 1.6 Gpixels per second, delivered via a new CoaXPress interface, allows for extremely high throughput and opens up an array of new possibilities for the next generation of inspection systems for demanding applications such as flat panel display, PCB and solar cell inspection.

# **Application**

- Flat Panel Display Inspection
- PCB Inspection
- Solar Cell Inspection
- Glass Inspection
- Print Inspection















#### **Standard Conformity**

The ELIIXA+ cameras have been tested using the following equipment:

- For the CXP Version :
  - A shielded Trigger cable
  - A 10m CoaXPress Cable for the data transfer, certified at 6Gb/s
- For the CameraLink version:
  - A shielded power supply cable
  - A Camera Link data transfer cable ref. 14B26-SZLB-500-OLC (3M)
  - A linear AC-DC power supply

e2v recommends using the same configuration to ensure the compliance with the following standards.

#### **CE Conformity**

The ELIIXA+ cameras comply with the requirements of the EMC (European) directive 89/336/CEE (EN50081-2, EN 61000-6-2).

#### **FCC Conformity**

The ELIIXA+ cameras further comply with Part 15 of the FCC rules, which states that: Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Warning**: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



# **Key Specifications**

Characteristics	Value	Unit
Sensor Characteristics		
Resolution	4 x 16384	Pixels
Pixel Size (square)	5	μm
Max Line Rate		
CoaXPress® 4x Links (8 or 10bits)	100	kHz
CoaXPress® 4x Links (12 bits)	100	kHz
CameraLink® 10xTaps Deca mode (8 bits)	50	kHz
CameraLink® 8xTaps Full mode (8 bits)	40	kHz
CameraLink® 4xTaps Medium mode (8 or 12	20	kHz
bits)		
Radiometric Performances (at Maximum Pixel rate and		D.
Bit Depth	8	Bits
	10 (CoaXPress® only)	Bits Bits
Description in the	12	
Responsivity	450	LSB 12bits/(nJ/cm2)
Response non linearity ( between 5 – 95% saturation)	<1	%
Maximum PRNU	3	%
Dynamic Range	73	dB
Functionalities (Programmable via Control Interface)		
Sensor Modes	Multi-lines 1 , 2 and 4 (16k pixels) Binning 1 or 2 lines (8k pixels)	-
Gain (Analog : In the ADC converter)	Up to 12	dB
Offset	-4096 to +4095	LSB
Trigger Mode	Timed (Free run) and triggered (Ext	Trig, Ext ITC) modes
Mechanical and Electrical Interface		
Power Supply	Single 12 to 24	$V_{DC}$
Power Consumption		
CameraLink®	<b>&lt;</b> 13	W
CoaXPress®	<16	W
Lens Mount	M95	-
Sensor Alignment	±100	μm
Sensor Flatness	±35	μm
General Features		
Operating Temperature	0 to 55 Front Face	°C
Storage Temperature	-40 to 70	°C
Regulatory	CE, FCC and RoHs Compliant	-




#### **Camera Description**

#### **Image Sensor**

The Eliixa+ 16k sensor is composed of two pairs of sensitive lines. Each pair of lines use the same Analog to Digital Column converter (ADC Column). An appropriate (embedded) Time delay in the exposure between each line this allows to combine two successive exposures in order to double the sensitivity of a single line.


This Time Delay Exposure is used only in the 4S multi-line modes (4 Lines) and also in the two binning modes, as described below.

The 16384 Pixels of the whole sensor are divided in 4 blocks of 4096 pixels.

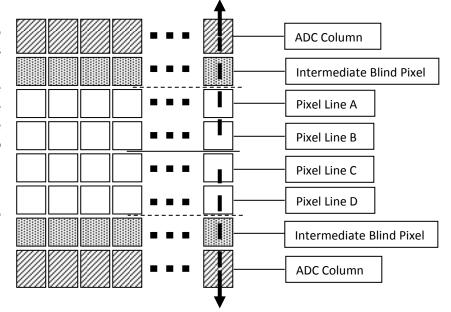


#### **Multi-Lines modes**

#### Multi-Lines Modes (16k Pixels Output)

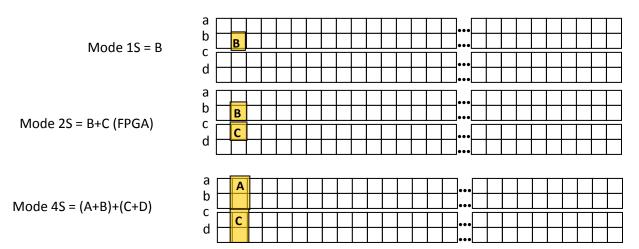


#### Binning Modes (8k Pixels Output):

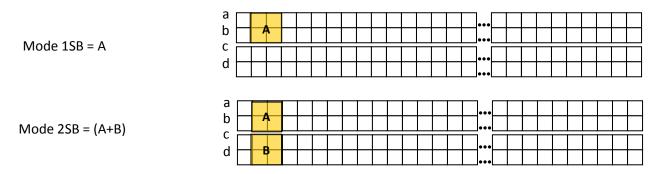






# **Camera Interface**

# **Mechanical Drawings**

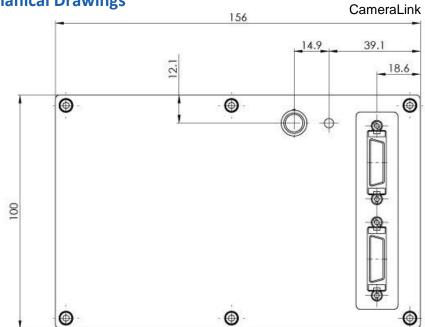

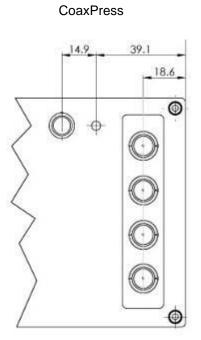

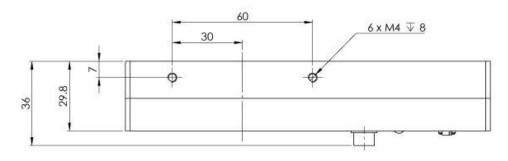

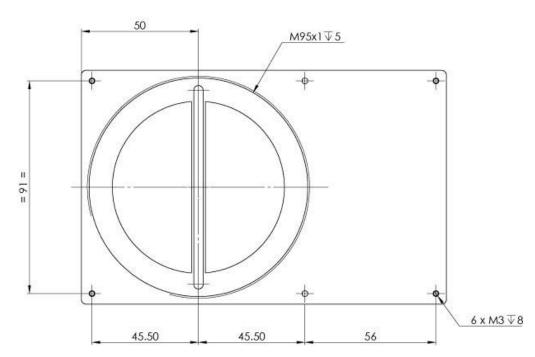



# **Sensor Positioning**

Sensor alignment					
X	9 ±0,1	mm			
Υ	50 ±0,1	mm			
Z	-9,4 ±0,15	mm			
Planarity	±35	μm			
Rotation (X,Y plan)	±0,2	0			
Tilt (versus lens mounting plane)	±35	μm			

# Input/Output Connectors and LED (CameraLink)





#### **Status LED Behaviour**


After less than 2 seconds of power establishment, the LED first lights up in ORANGE. Then after a Maximum of 30 seconds, the LED must turn in a following colour :

Colour and state	Meaning
Green and continuous	ОК
Green and blinking slowly	Waiting for Ext Trig (Trig1 and/or Trig2)
Red and continuous	Camera out of order : Internal firmware error

**Signal** 

#### **Power Connector**

Camera connector type: Hirose HR10A-7R-6PB (male) Cable connector type: Hirose HR10A-7P-6S (female)

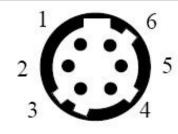

PWR	1	GND	4
PWR	2	GND	5
PWR	3	GND	6

Signal


Pin

Camera side description

Power supply from 12 to 24v
Power 13W max with an typical inrush current peak of **1,8A** during power up

Typical values	Current consumption		
	12V 24V		
ELIIXA+ CL (normal)	1,06A	0,54A	
ELIIXA+ CL (Standby)	0,47A	0,25A	

Power up Time: Around 43s (Green Light)

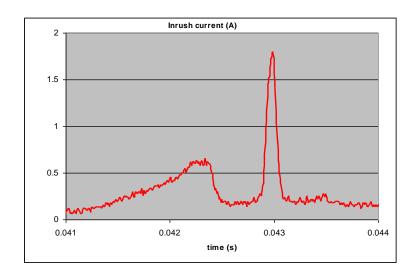




# **Output Configuration (CameraLink)**

	Connector CL1 + CL2	Pixels per Channel				
Medium CameraLink Mode	Medium CameraLink Mode					
4 Channels 8bits	4 x 85MHz	4 x 4096				
4 Channels 12bits	4 x 85MHz	4 x 4096				
Full CameraLink Mode						
8 Channels 8bits	8 x 85MHz	8 x 2048				
Deca Mode						
10 Channels 8bits	10 x 85MHz	10 x 1638				

Medium Mode 4x4096 Pixels at 85MHz each Channel (4x2048 pixels in Binning Mode 1SB or 2SB) 4 Taps Separate, from Left to Right:

Ch 1	Ch 2	Ch 3	Ch 4
$\longrightarrow$	$\longrightarrow$	$\longrightarrow$	<b>→</b>

■ FULL Mode 8x2048 Pixels at 85MHz each Channel (8x1024 pixels in Binning Mode 1SB or 2SB) 8 Taps Separate, from Left to Right:

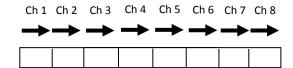


■ FULL+ Mode 10x1638 Pixels at 85MHz each Channel (10x819 pixels in Binning Mode 1SB or 2SB)

10 Taps Separate, from Left to Right:

Ch 1 Ch 2 Ch 3 Ch 4 Ch 5 Ch 6 Ch 7 Ch 8 Ch 9 Ch 10



# Input/Output Connectors and LED (CoaXPress)

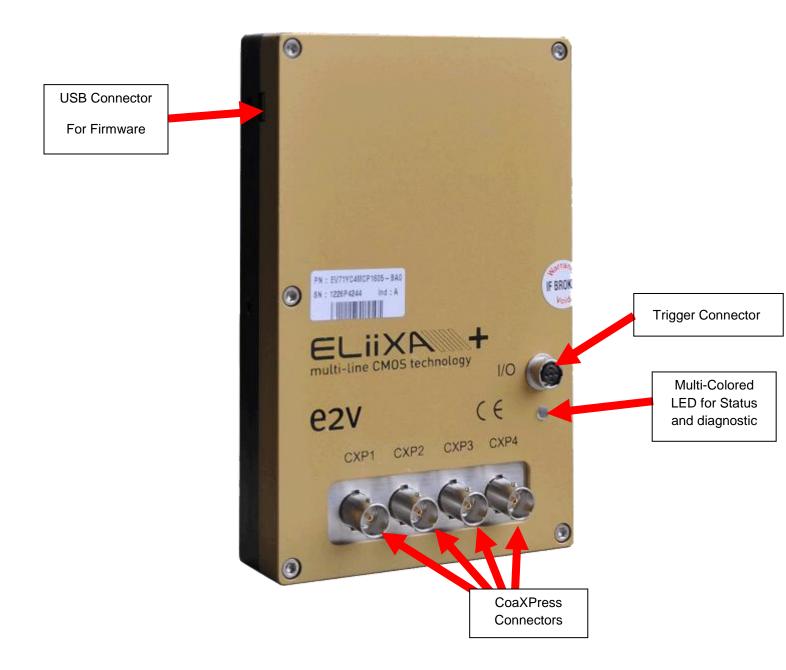



#### **Status LED Behaviour**

The Power LED behavior detail is the following:

Colour and State		Meaning
Off	$\bigcirc$	No power
Solid orange		System booting
Fast flash green Shown for a minimum of 1s even if the link detection is faster	*	Link detection in progress
Slow flash alternate red / green		Device / Host incompatible
Slow pulse green	X	Device / Host connected, but no data being transferred
Slow pulse orange	X	Device / Host connected, waiting for event (e.g. trigger, exposure pulse)
Solid green whenever data transferred (i.e. blinks synchronously with data)	X	Device / Host connected, data being transferred
500ms red pulse In case of multiple errors, there shall be at least 200ms green before the next error is indicated	<b>+</b>	Error during data transfer (e.g. CRC error, single bit error detected)
Fast flash red	*	System error (e.g. internal error)

#### **Power Over CoaXPress**

The ELIIXA+ CXP is compliant with the Power Over CoaXPress: There is no Power connector as the power is delivered through the Coaxial Connectors 1 and 2.

In the Standard, the Power Over CoaXPress allows to deliver 13W (under 24V) per Channel.

The ELIIXA+ CXP requires 18W then two connectors are required for the power: The two first are used for this purpose.

If you want to Power ON the Camera you have to connect the Coaxial connector output 1 of the camera to the coaxial connector 1 of the Frame Grabber.

**Note 1:** Only the connector 1 position is mandatory. They other 3 connectors can be inverted but the camera still needs the 2 first connectors to get it power and be able to start up.

**Note 2**: Removing the 2 first connectors will shut down the Camera: You can reset the Camera by quickly (**less than 1s**) connect/disconnect the Connector CXP1 but after a longer shut down, you'll have to reboot the PC with the Camera full connected to the frame grabber in order to synchronize the discovery of each power line.

**Note 3**: With some frame grabber you have access to a specific command (from the Frame Grabber interface) for shutting down/up the power of the CoaxPress: This solution, with the complete reboot, is the better solution to ensure a complete power On of the Camera.



# **Trigger Connector**

Camera connector type: Hirose HR10A-7R-5SB or compliant

Cable connector type: Hirose HR10A-7P-5P (male) or compliant,

Provided with the Camera



 Signal
 Pin

 LVDS IN1+ / TTL IN1
 1

 LVDS IN1 2

 LVDS IN2+ / TTL IN2
 3


 LVDS IN2 4

 GND
 5

Receptacle viewed from camera back

IN1/IN2 are connected respectively to Line0/Line1 and allow to get external line triggers or the forward/Reverse "Live" indication.

On the Connector side, the  $120\Omega$  termination is validated only if the input is switched in LVDS or RS422. The electrical schematic is detailed below :

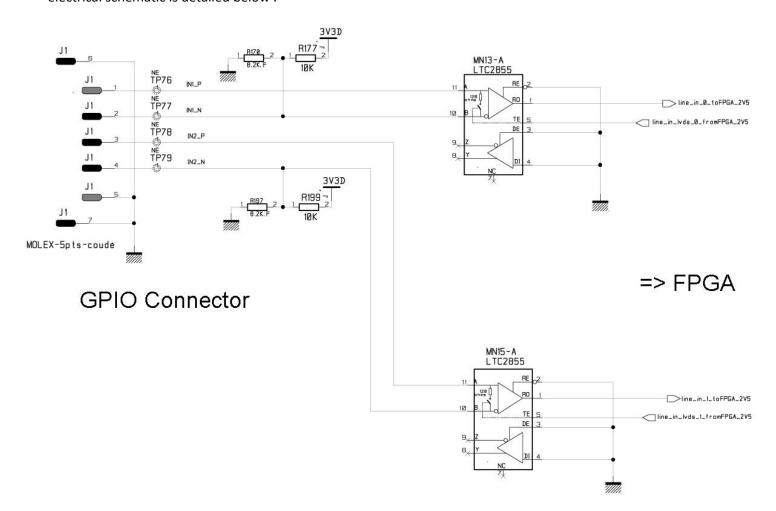



# **Optical Interface : Lens Compliance**

QIOPTICS (LINOS)							
QIOPTICS (LINUS)	Nominal	N40-	mification Da	ngc	NAOF	ocus tube	Lens Reference
	Magnification	iviag	gnification Ra	nge		erence	Part number
Inspec.x. L 5.6/105	0,33 X	(	0,25 <b>–</b> 0,45 X		2408-012-000-41		0703-085-000-20
Inspec.x. L 5.6/105	0,5 X		0,4 - 0,65 X		2408-012-000-41		0703-084-000-20
Inspec.x. L 5.6/105	0,87 X		0,6 - 0,9 X		2408-0	12-000-43	0703-083-000-20
Inspec.x. L 5.6/105	1 X		0,85 - 1,2 X		2408-0	12-000-43	0703-082-000-20
Inspec.x. L 4/105	3 X		2,8 – 3,3 X		2408-0	12-000-46	0703-104-000-20
Inspec.x. L 4/105	3,5 X		3,3 – 3,7 X		2408-0	12-000-44	0703-095-000-21
Inspec.x. L 3.5/105	5 X		4,8 – 5,2 X		2408-0	12-000-45	0703-102-000-20
SCHNEIDER KREUZNACH							
	Nominal	Mag	nification	W	orking D	istance	Reference Part number
	Magnification	F	Range		(at nom.	Mag.)	
SR 5.6/120-0058	1 X	0,88	3 – 1,13 X		212 mm		1002647
SR 5.6/120-0059	0,75 X	0,63	3 – 0,88 X		252 mm		1002648
SR 5.6/120-0060	0,5 X	0,38	3 – 0,63 X		333 mm		1002650
SR 5.6/120-0061	0,33 X	0,26	5 – 0,38 X		453 mm		1004611
Accessories	V mount 25mm macro-extension tube		Necessary to combine the whole lens system		20179		
	V mount to Leica adapter				20054		
	L	Jnifoc :	76			is system	13048
	Adapter M	158x0.	75 – M95x1				1062891
	Extension t	ube M	95x1, 25mm			combined to	1062892
	Extension t	ube M	95x1, 50mm			each the propriate	1062893
	Extension tu	ıbe M	95x1, 100mm			gnification	1062894
MYUTRON							
	Nominal Magnifica	Nominal Magnification Working Distance		ance			
XLS03-E	x0,3 477mm		7mm M95 Cu		M95 Cu	stom Mount available	
XLS53-E	x0,5		324mm			A	perture (∞) : 4 <b>.</b> 7
XLS75-E	x0,75		246mm				
XLS010-E	x1		197mm				
XLS014-E	x1,4		170mm				
XLS203-E	x2		146mm				



EDMUND OPTICS						
EDIVIOND OFFICS						
	Nominal Magnification	Working Distance	Reference Part number			
		(at nom. Mag.)				
TechSpec F4	1 X	151 mm	NT68-222			
TechSpec F4	1,33 X	158,5 mm	NT68-223			
TechSpec F4	2,0 X	129 mm	NT68-224			
TechSpec F4	3,0 X	110 mm	NT68-225			
Accessories	Large Format Tip/Tilt E	Bolt Pattern Adapter, 2X	NT69-235			
	Large Format F	ocusing Module	NT69-240			
	Large Forma	t Adapter Set	NT69-241			
NAVITAR						
Raptar Pro 4/86	1 X	Extension Tubes on	1 - 17494			
		request				
NIKON						
Rayfact F4	0,05 X - 0,5 X	1820,4mm – 230,3mm	Rayfact ML90mm F4			
NAVITAR						
Raptar Pro 4/86	Magnification: 1 X	Extension Tubes on request	1 - 17494			

# **Camera Models**

Camera Part Number	Max Speed	Interface	Features
EV71YC4MCL1605-BA1	16k : 50kHz	CameraLink®	
EV/11C4WCL1003-DA1	8k : 100kHz	4, 8 or 10 Taps at 85MHz	-
EV71YC4MCP1605-BA0	16k /8k 100kHz	CoaXPress® 4 x 6Gb/s	-
EV/74 VC4N4CL4 COE DU4	16k : 50kHz	CameraLink®	New Sensor
EV71YC4MCL1605-BH1	8k : 100kHz	4, 8 or 10 Taps at 85MHz	HDR Function
EV71YC4MCP1605-BH0	16k /9k 100kUz	CoaXPress®	New Sensor
EV/11C4IVICP1605-BHU	16k /8k 100kHz	4 x 6Gb/s	HDR Function