Genie TS-C3500

Area Scan Color Cameras



Key Features

- Uses standard PC Ethernet port & hardware
- Supports cable lengths up to 100 m (CAT-5e or CAT-6)
- Simplified set-up with field proven Sapera Essential software featuring CamExpert
- Engineered to accommodate industrial environment with a Ruggedize, screw mount, RJ-45 connector
- Auto-Iris (Video, DC or Motorized)

Programmability

- Higher frame rates achievable in partial scan mode
- Global electronic shutter with exposure Control
- Auto-Brightness Feature
- Extended Dynamic Range Function
- On-board flat-field correction
- Multi-Exposure Feature
- Programmable LUTs
- On-board Image compression
- Transfer On-Demand Function
- IEEE1588 Precise time Protocol

Typical Applications

- Electronics manufacturing inspection
- · Industrial metrology
- · Intelligent traffic systems

Overview

Small compact GigE Vision camera with uncompromised image quality.

The Genie TS-C3500 uses a Teledyne DALSA CMOS, color sensor with a resolution of 3520 x 2200. Teledyne DALSA's proprietary sensor technology allows for image capture rates of 19 fps in 8M pixels resolution while maintaining exceptional image quality. The Genie TS-C3500 takes advantage of gigabit Ethernet technology, transmitting data over standard CAT-5e and CAT-6 cables to distances of up to 100 m. Like all Genie cameras, the TS-C3500 is based on AIA (Automated Imaging Association) GigE Vision Standard to directly link the camera to a PC.



Specifications

Active Resolution 3520 x 2200
Acquisition Frame Rate 19 fps

Data Output Transfer Gigabit Ethernet, also supports 100 Mbps

Pixel Size 6.0 µn

Data Format 8 and 10-bits Raw Bayer

Exposure Control Automatic, Programmable, or via External Trigger

Dynamic Range 60 dB

Gain Control Automatic, Manual and One-Push Gain modes
I/O Ports 4 opto-isolated input, 4 opto-isolated output,

3 motorized Control, RS-485 Port, and RS-232 Port

Image Buffer 512MB of On-board memory

Lens Mount M42 x1mm

Size 49 mm x 49 mm x 54 mm

 $\begin{array}{ll} \text{Mass} & \sim 196 \text{ g} \\ \text{Operating Temp} & -20^{\circ} \text{ to } +60^{\circ} \text{C} \end{array}$

Power Supply 12 to 24V or Power Over Ethernet (POE)

Power Dissipation ~4.5 to 5.5W

Data Connector Standard or Screw mount RJ-45
Power and I/O Micro-D 25-pin and 4-pin auto-Iris
Regulatory Compliance FCC Class A, CE, RoHs 2004/105/EC

Camera Specification GigE Vision v1.2 Compliant

Software Platform Teledyne DALSA Sapera LT or 3rd Party Genicam Compliant SDK


Part Number G2-GC10-T3505





Genie TS-C3500


Area Scan Color Cameras


All Genie cameras feature value added functionality designed specifically for imaging and machine vision applications.
All features are easily accessible with Teledyne DALSA's advanced software tools. These tools deliver superior image capture, performance, and control.

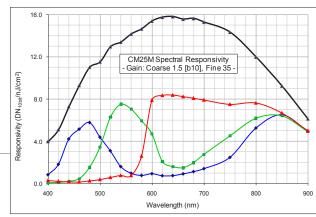

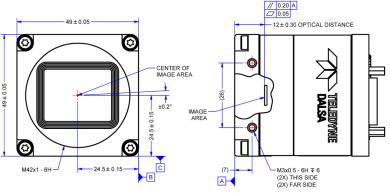

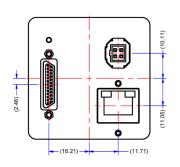

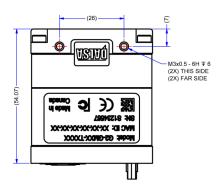

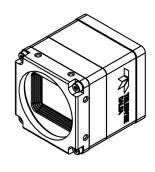

NOTES:
1. UNITS: MILLIMETERS.
2. IMAGE AREA IS ALIGNED TO DATUMS A.B. & C.

www.teledynedalsa.com

Americas

Boston, USA +1 978-670-2000 sales.americas@teledynedalsa.com

Europe

Krailling, Germany +49 89-89-54-57-3-80 sales.europe@teledynedalsa.com

Asia Pacific

Tokyo, Japan +81 3-5960-6353 sales.asia@teledynedalsa.com Shanghai, China +86 21-3368-0027 sales.asia@teledynedalsa.com

